

**CR-S\* Conduit Stopper Box - ASSEMBLY INSTRUCTIONS FOR SAFE USE**


**Brief Description**

The Peppers CR-S\* type Conduit Stopper Box is for outdoor use in the appropriate Hazardous Areas with conductors carried in conduit, providing a flameproof barrier entry into enclosures and as a line bushing for terminating flying leads. It gives environmental protection to IP68 and Deluge.



**Warning**

PLEASE STUDY CAREFULLY BOTH PAGES OF THESE INSTRUCTIONS BEFORE INSTALLATION. These conduit stopper boxes should not be used in any application other than those mentioned here or in our Data Sheets, unless Peppers states in writing that the product is suitable for such application. Peppers can take no responsibility for any damage, injury or other consequential loss caused where the fittings are not installed or used according to these instructions. This leaflet is not intended to advise on the selection of conduit stopper boxes. Further guidance can be found in the standards listed overleaf.

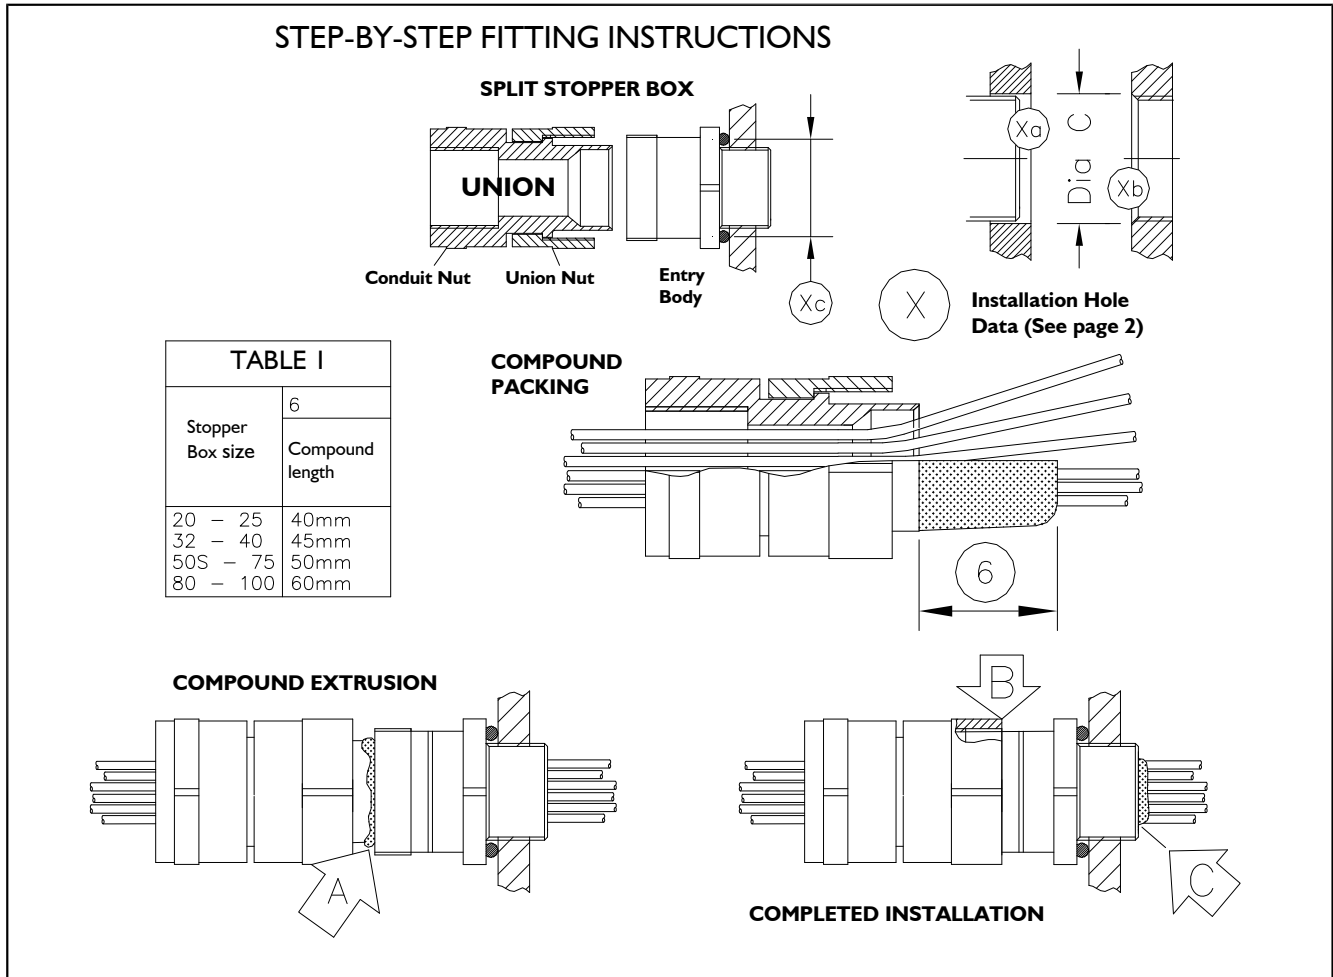

**STEP-BY-STEP FITTING INSTRUCTIONS**

- 1 Split Stopper Box as shown
- 2 Fit Entry Body. Hand-tighten, then using wrench tighten a further ½ turn. DO NOT EXCEED MAX TORQUE FOR ENCLOSURE.
- 3 To maintain ingress protection, apply sealant to conduit threads. Screw Union onto conduit. Prepare conductors and pass through this assembly.

**HEALTH AND SAFETY WARNING** The resin used in the compound can cause eye and skin irritation. For your personal protection, wear the gloves supplied while mixing and applying. The uncured compound should not be allowed to come into contact with foodstuffs.  
**A COMPREHENSIVE SAFETY DATA SHEET PROVIDED BY THE COMPOUND MANUFACTURER IS AVAILABLE ON REQUEST**

- 4 Check compound has not passed its "Use By" date. Installation at temperatures below 10°C should be avoided.
- 5 Trim any hardened pieces from ends of stick. Mix the compound by rolling, folding and breaking. Ease mixing by cutting large sticks in half. Fully mixed compound has a uniform yellow colour with no streaks.
- 6 Support the conduit/union assembly. Starting at the middle, pack small amounts of rolled-out compound between the cores. Work outwards until all gaps are filled. Bundle the cores with cord or tape so they are not disturbed. Wrap compound around the outside of the core bundle, then locate the compound & cores into the Union cup. Ensure that the cup is completely filled. Build up compound around the outside of the cores, with a slight taper and to approximate compound length shown in diagram and Table 1 column 6
- 7 Pass cores through & push compound into Entry Body until Union cup engages. Remove squeezed out compound at arrow A. Screw Union Nut 7 full turns onto Entry Body (arrow B).
- 8 Clean off excess compound from Entry Body to allow withdrawal when cured (arrow C). Cores may be disturbed after 1 hour. Leave to cure for at least 4 hours when working at 21°C.
- 9 To release and pull back the joint for inspection, unscrew Union Nut.

**CR-S\* Conduit Stopper Box - ASSEMBLY INSTRUCTIONS FOR SAFE USE**

**10** To remake joint, hold Conduit Nut and hand-tighten Union Nut. Then refer to table below and tighten using wrench to the given amount.


**11** The equipment should not be energised until the compound has been left to cure for at least 4 hours when working at 21°C. See chart 'Energising Time vs. Temperature' for further guidance

**X INSTALLATION HOLE DATA** (See table below).

- Xa** Diameter for clearance holes (NOT Ex d).
- Xb** Diameter of countersink for threaded holes (Ex d).
- Xc** Diameter of O-ring seat.

**Wrench tightening information (Instruction 10), and permitted cores**

X Hole data		Stopper Box Size	Tighten using wrench	Max Diameter over Cores	Max No of Cores
Dia Xc	Dia Xa/Xb				
22.2	20.5	<b>20</b>	½-turn	12.5	14
27.9	25.5	<b>25</b>	½-turn	17.8	25
35.5	32.5	<b>32</b>	¼-turn	23.5	50
43.5	40.5	<b>40</b>	¼-turn	28.8	80
53.5	50.5	<b>50</b>	½-turn	39.4	100
66.5	63.5	<b>63</b>	½-turn	50.0	120
78.5	75.5	<b>75</b>	¼-turn	60.8	140
83.5	80.5	<b>80</b>	½-turn	64.4	160
88.5	85.5	<b>85</b>	¾-turn	69.8	180
93.5	90.5	<b>90</b>	¾-turn	75.1	200
103.5	100.5	<b>100</b>	¾-turn	80.5	220

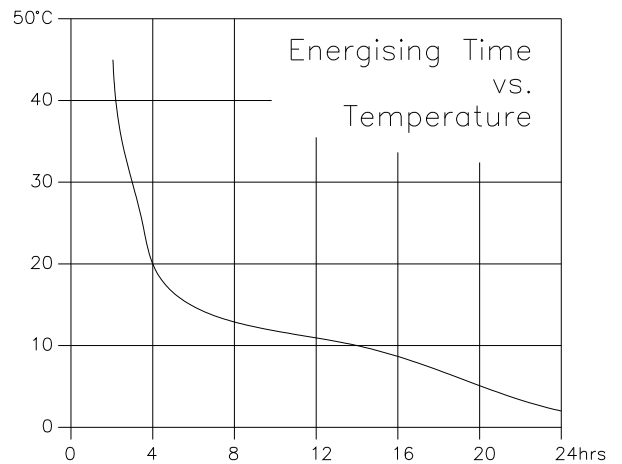

**Installation Guidance**

Point	Advice
1	<ul style="list-style-type: none"> <li>◆ BS EN 60079-10 Classification of Hazardous Areas</li> <li>◆ BS EN 60079-14 Electrical Installations in hazardous areas (other than mines)</li> <li>◆ BS 6121, Part 5 Selection, Installation and Maintenance of Cable Glands</li> <li>◆ IEC 61241-0:2004 and IEC 61241-1:2004 Ignitable dust – Protection by enclosure</li> </ul>
2	Installation should only be carried out by a competent electrician, skilled in cable gland and conduit installation.
3	<b>NO INSTALLATION SHOULD BE CARRIED OUT UNDER LIVE CONDITIONS.</b>
4	To maintain Ingress Protection ratings above IP54, use IP washers or O-rings for parallel threads. For taper threads use thread sealant. Also see page 1 diagram and Hole Data above.
5	To ensure the stated IP rating is maintained, at the point of interface the surface of the enclosure should be flat, free from debris and rigid with the hole drilled straight and to an appropriate diameter.
6	Where an earth contact is required the surface of the enclosure should be sufficiently flat and rigid. With painted enclosures a serrated star washer should be fitted to break through the paint and make a satisfactory earth contact.
7	Once installed do not dismantle except for occasional inspection. The gland is not serviceable and spare parts are not supplied.
8	Parts are not interchangeable with any other design. If manufacturers' parts are mixed, certification will be invalidated.

**Limitations on Usage.** Be sure your installation complies with the following:-

Feature	Comment
Enclosure entry thread	The female thread in the enclosure must comply with clause 5.3 of IEC/EN 60079-1. Do not damage threads on assembly. Check that the number of fully engaged threads is at least 5.

**Interpretation of Markings.** Markings on the outside of this gland carry the following meanings:

**Cable Gland Type & Size CR-S-a-bbb-ccc-ddd-IP68-nn**

- a** = Main component material **B** = brass **S** = stainless steel
- bbb** = Gland size
- ccc** = Entry thread type and size **IP68** = Ingress Protection code
- ddd** = Conduit thread type and size **nn** = year of manufacture

**Protection Concept and Gas Groups Ex d I & IIC / Ex tD A21 IP68 / Ex nR II:** Ex d = Flameproof; I = suitable for Gas Group I (methane) ignitable gas/air mixtures; IIC = suitable for Gas Group IIC (e.g. hydrogen) ignitable gas/air mixtures and also Groups IIB and IIA; Ex tD = Ignitable dust protection by enclosure; Ex nR = Restricted Breathing.

**Certificate Numbers** (ATEX) **SIRA 03ATEX1479X** **SIRA 09ATEX1221X**  
 (IEC) **IECEx SIR 07.0098X**

**ATEX (EU Directive 94/9/EC) Markings**

**ATEX Special Conditions for Safe Use**

- (1) These glands must not be used with enclosures where the temperature at the point of mounting exceeds -60°C to +85°C

**IEC Ex Conditions of Certification**

- (1) These glands must not be used with enclosures where the temperature at the point of mounting exceeds -20°C to +85°C
- (2) The interfaces between the male thread of the products and an associated enclosure cannot be defined. Therefore it is the user's responsibility to ensure that the appropriate Ingress Protection level is maintained at these interfaces.